

le feu By Lauritsen 

D E F I N E F I R E

User Manual Le Feu Heatplate

BEFORE YOU START

This heatplate is made to redirect the heat out of the fireplace and into the surroundings.

This heatplate is to be installed in original Le Feu fireplaces ONLY.

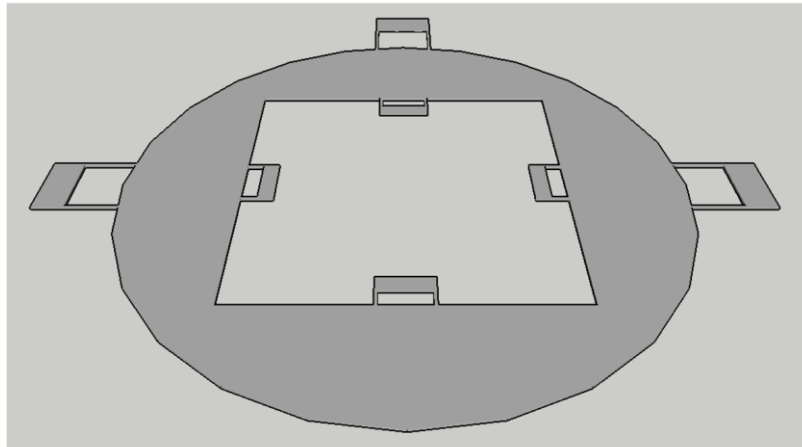
Before installing the heatplate, you must install the fireplace as you want it, following the instructions from the fireplace.

When The fireplaces is installed you can install the heatplate using the following steps.

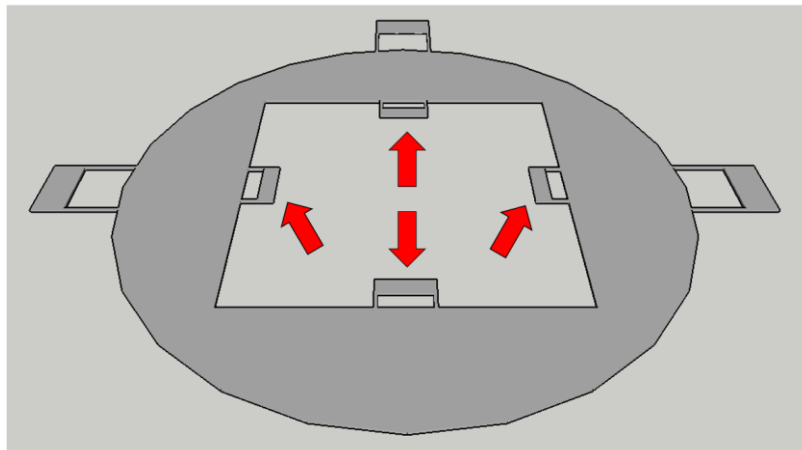
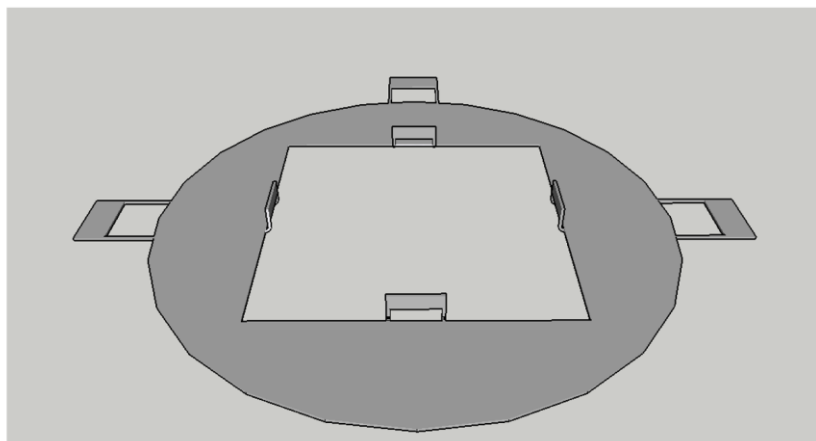
If you have problems, please contact your local dealer for support

STEP 1

Unpack the
heatplate bracket

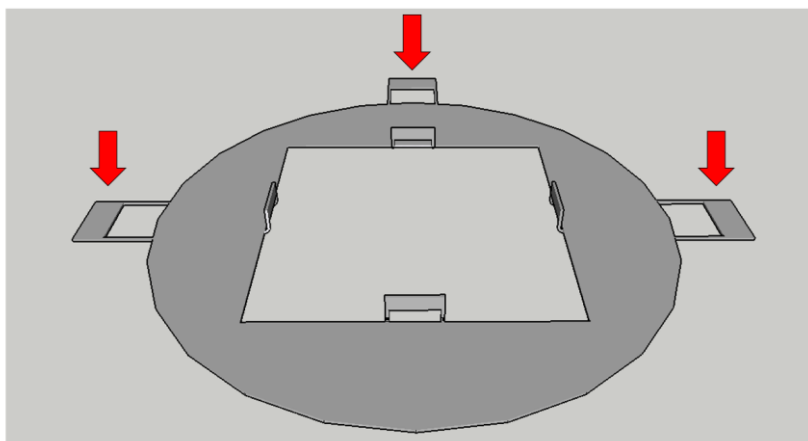
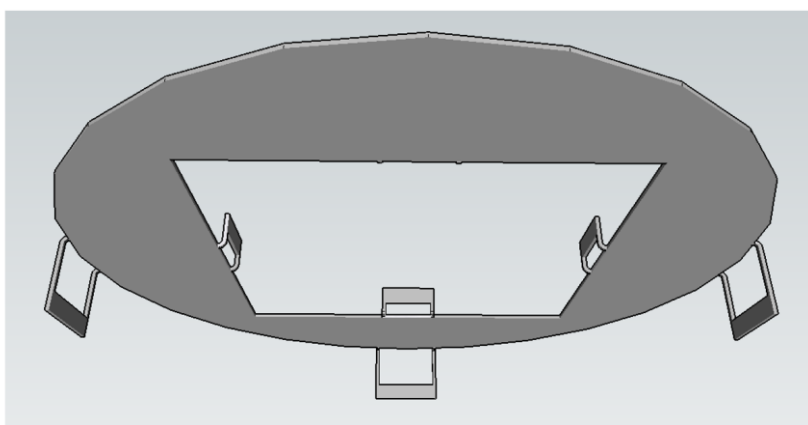
**STEP 2**

Bend the 4 inside
flaps up 90
degrees

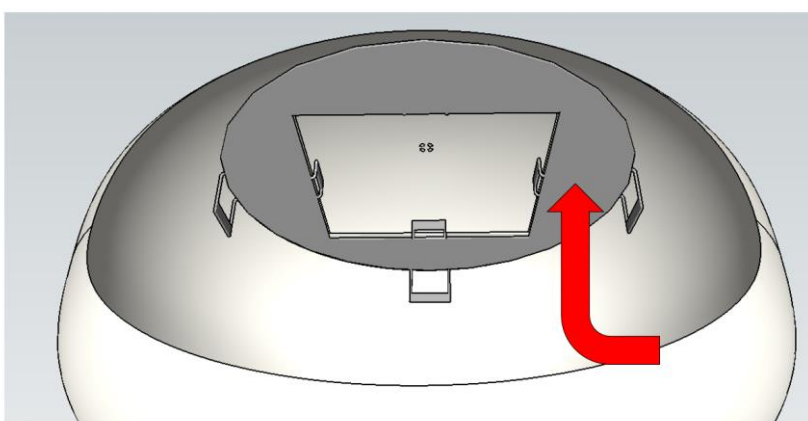
**STEP 2**

STEP 3

Bend the outside
flaps down 90
degrees

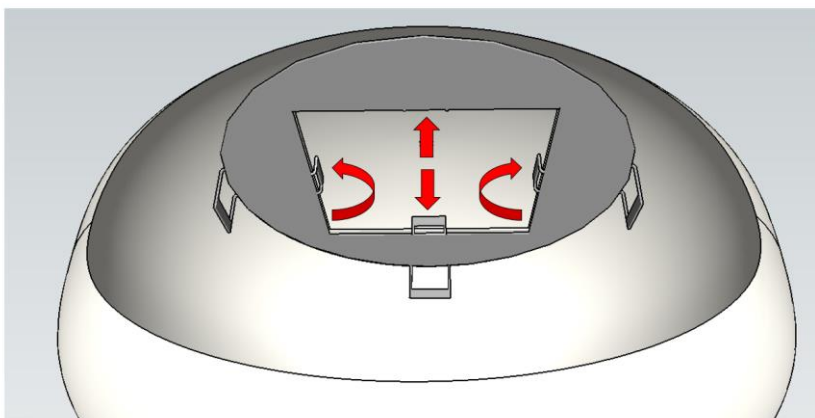
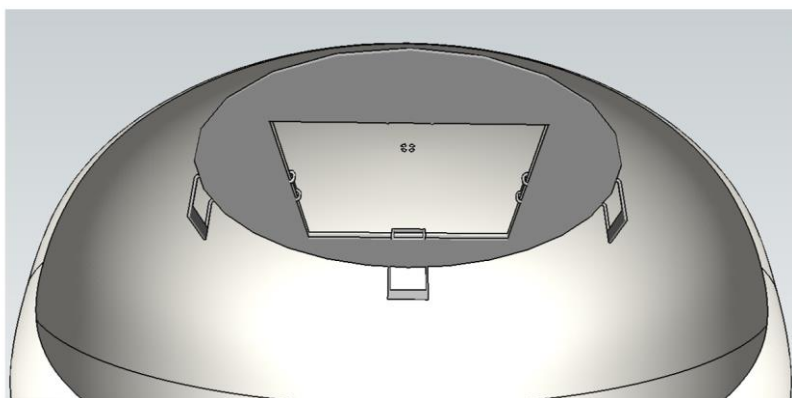
**STEP 3****STEP 4**

Insert the
heatplate bracket
into your Le Feu
Fireplace in the
top square

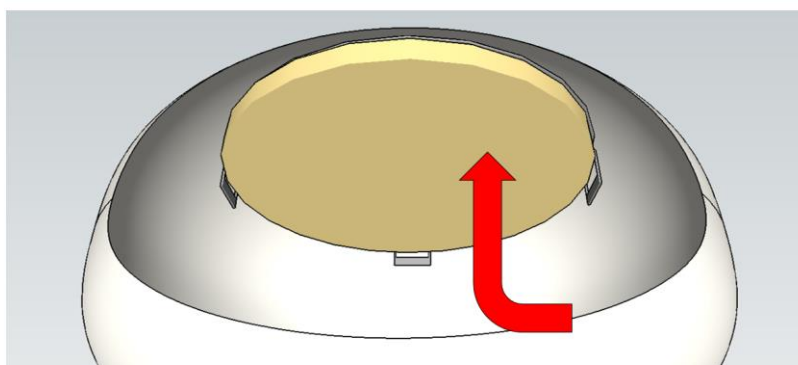


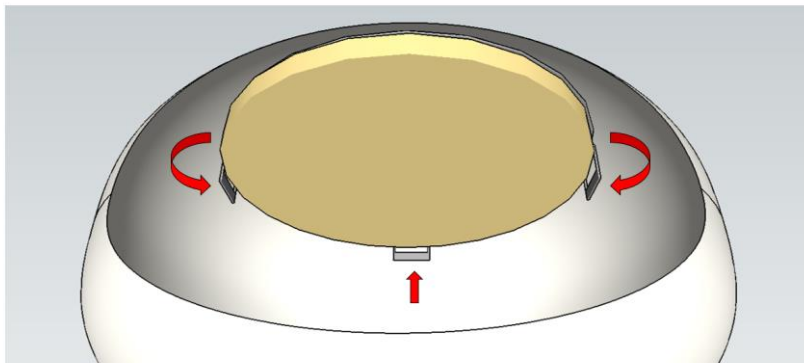
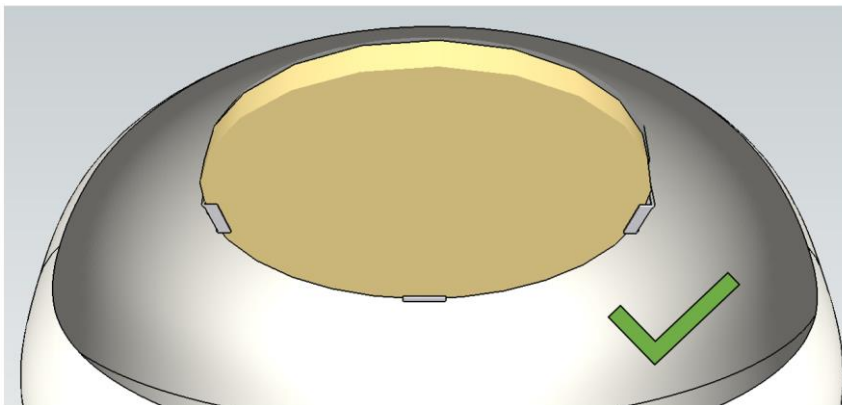
STEP 5

Bend the 4 inside flaps all the way around, to fix the bracket to the inside of the fireplace.

**STEP 5****STEP 6**

Insert the heatplate in the bracket



<p>STEP 7</p> <p>Bend the 3 outside flaps around the heatplate to fix it to the bracket</p>	
<p>STEP 8</p> <p>Now your fireplace is ready to use</p> <p>Enjoy your new fireplace!</p>	

(Remember to use original Le Feu fuel, to ensure the best result)

We hope you enjoy your product

The Le Feu Team